


### Fixing Instructions

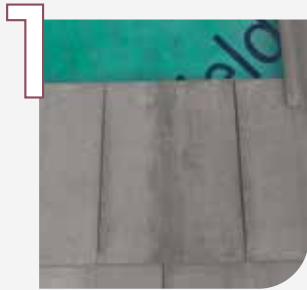

**1** Set out the roof and lay the tiles in line with the manufacturers fixing instructions until you reach the area where the vent tile is to be fitted.



**5** Continue to fit the remaining tiles again in line with the manufacturers fixing instructions.




**2** Remove the tile where it is to be replaced with a tile vent and mark the cut line as shown with a "X" between two battens.



**6** With the Square Top Vent, if a wider channel is needed to suit the concrete tile being used, cut out the two thinner wall sections on the front leading edge as shown here.




**3** Cut the membrane with an "X" between two battens. **Note:** this should not clash with a rafter. Fold the top envelope section of the membrane from your "X" cut, over the top batten. Secure into position with a felt tack into the batten.

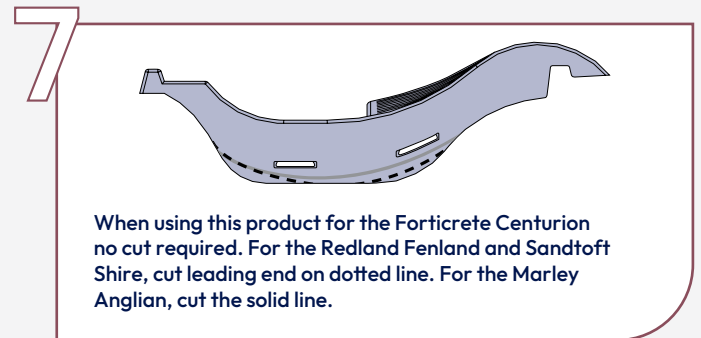

**7** When using this product for the Forticrete Centurion no cut required. For the Redland Fenland and Sandtoft Shire, cut leading end on dotted line. For the Marley Anglian, cut the solid line.



**4** Select the Vent Tile to match the profile and colour of your tile. For roof space ventilation fix only the tile vent in place. For mechanical extraction or connection to soil pipe, install with Flexipipe DL3FP.

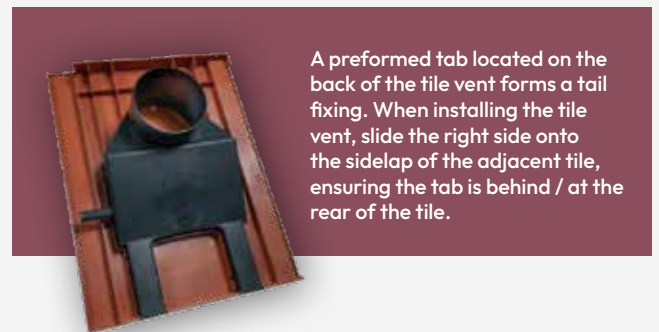

A preformed tab located on the back of the tile vent forms a tail fixing. When installing the tile vent, slide the right side onto the sidelap of the adjacent tile, ensuring the tab is behind / at the rear of the tile.